


Laminar flow HEPA filtration

Operational particulate counts are kept low even when large amounts of particulate is generated.

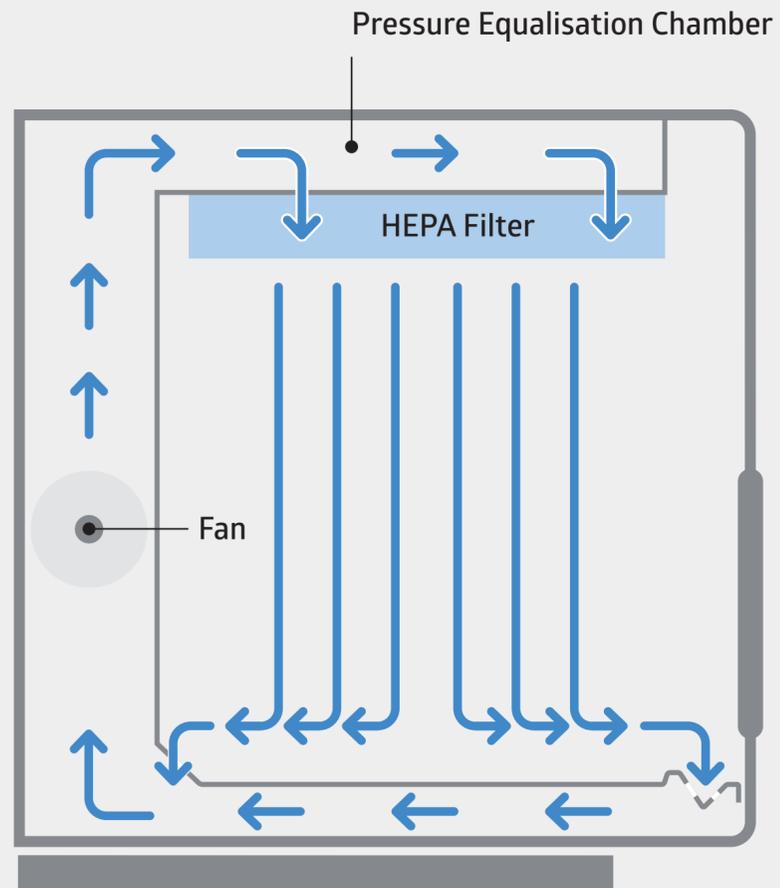

VS

Turbulent flow HEPA filtration

Operational particulate counts are highly dependent on the amount of particulate created by the operator / process.

